


KEROSENE LAMP

NAMES OF PARTS

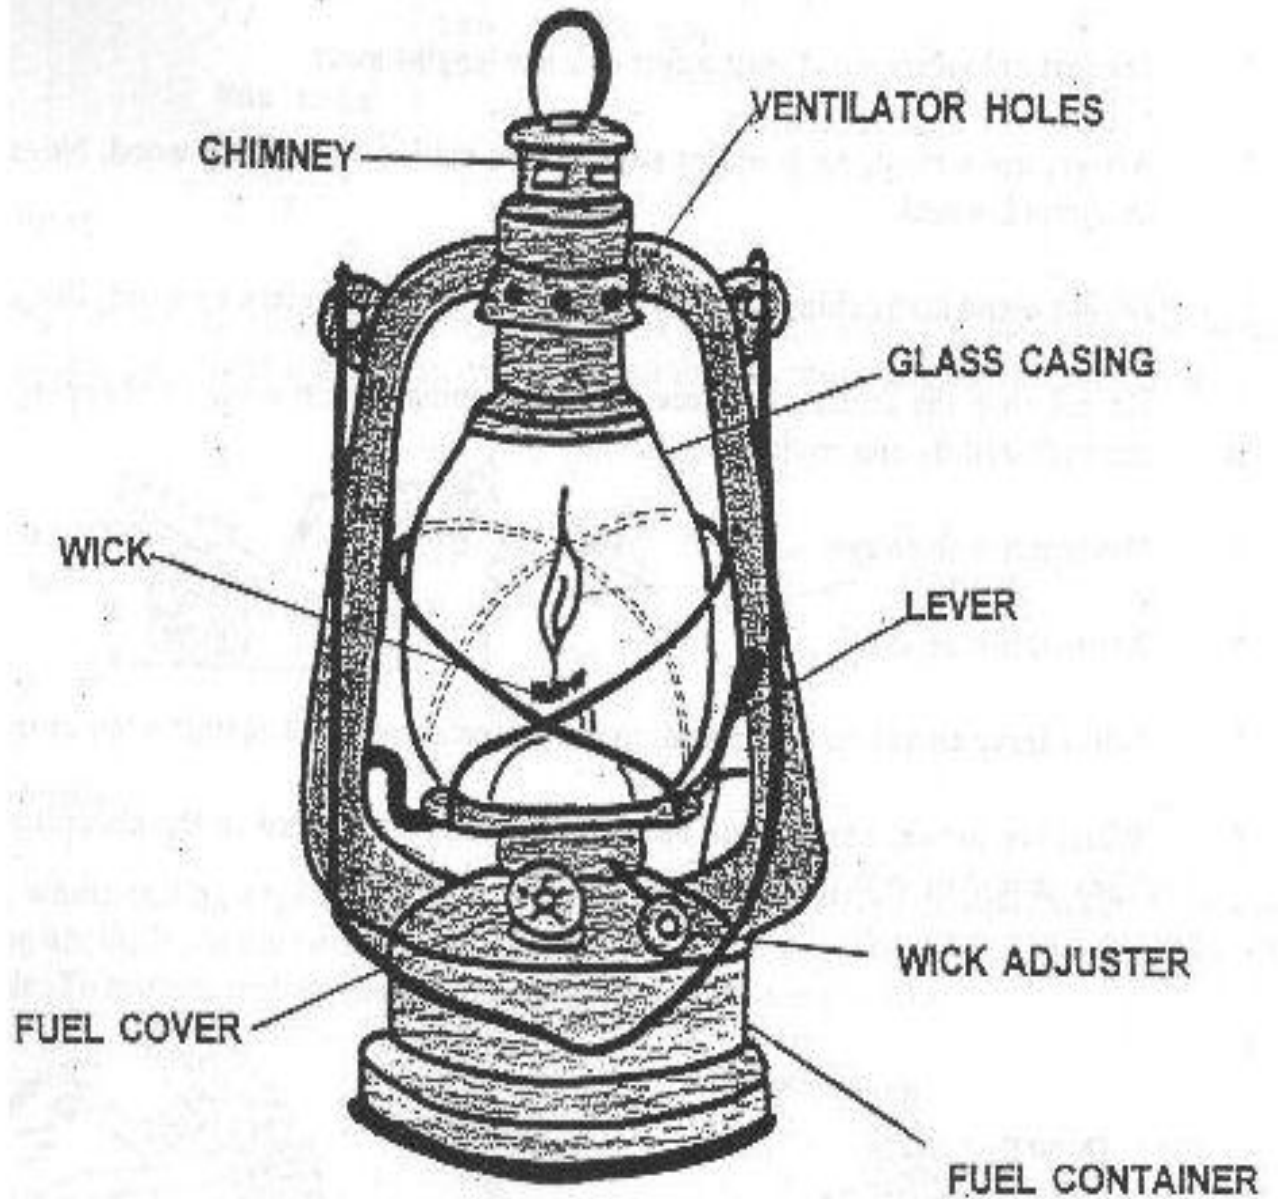

TO LIGHT THE LAMP

1. Lower the lever to raise the glass casing.
2. Turn the wick adjuster to raise the wick.
3. Place the lighted match at the wick from under the glass casing. Then, raise the lever.
4. The fire can be controlled by turning the wick adjuster.

TO REMOVE AND REPLACE THE GLASS CASING

1. Raise the chimney using one hand while the other hand tilts the glass casing away from the wick adjuster and fuel cover.
2. To put the glass casing back, raise the chimney with one hand while the other hand places the glass casing in position at a tilted angle first then upright. The chimney is then lowered.